



## LWS 401-450HD

Kamera / Camera	Höheneinstellung / Height Position	Abstandshülsen / Spacers ( mm )	Schrauben / Screws
Blackmagic Cinema Camera	21 mm	8 + 4 + 2	M5x25
Blackmagic Pocket Cinema Camera	52,5 mm	16 + 16 + 8 + 4 + 2	M5x60
Blackmagic Studio Camera	13 mm	4 + 2	M5x20
Canon XH G1 / A1	28 mm	16 + 4 + 2	M5x35
Canon C300 / 500	7,5 mm	no	M5x16
DSLR Canon 7D / PL FGV	43 mm	16 + 16 + 4 + 1	M5x50
DSLR Canon 5D / Nikon D90	43,5 mm	16 + 16 + 4 + 1	M5x50
JVC GY-HD100/101	37 mm	16 + 8 + 4 + 2	M5x40
JVC GY-HMQ10	19,5 mm	8 + 4 + 1	M5x25
Nikon D800	36,5 mm	16 + 8 + 4 + 2	M5x40
Panasonic AG-AF100 / 101	31,5 mm	16 + 8 + 1	M5x35
Panasonic HPX-250	18 mm	8 + 4	M5x25
Panasonic DMC-GH3	50,5 mm	16 + 16 + 8 + 4	M5x60
Sony HVR-Z7	24,5 mm	16 + 2	M5x30
Sony HXR-NX5	26 mm	16 + 4	M5x30
Sony PMW-EX3	21,5 mm	8 + 4 + 2 + 1	M5x25
Sony PMW-F3	19,5 mm	8 + 4 + 1	M5x25
Sony PMW-200	25 mm	16 + 2	M5x30
Sony NEX-EA50	31 mm	16 + 8	M5x35
Sony NEX-FS100	40 mm	16 + 16 + 2	M5x45
Sony NEX-FS700	31,5 mm	16 + 8 + 1	M5x35
Sony NEX-VG900E	45 mm	16 + 16 + 4 + 2 + 1	M5x50
Sony F5 / 55	12 mm	4 + 1	M5x20
Sony FDR-AX100	42 mm	16 + 16 + 4	M5x50
Sony PMW-300 K1/K2	20 mm	8 + 4 + 1	M5x25